

TRANSFORMER 3383



model	N° steps	A (mm/ inch)	B (mm/ inch)	C (mm/ inch)	D (mm/ inch)	E (mm/ inch)	F (mm/ inch)	G (mm/ inch)	H (mm/ inch)	X (mm/ inch)	Y (mm/ inch)	dynamic load (kg/lbs)	static load (kg/lbs)	weight (kg/lbs)
3383/40.0	4	2940 / 116"	1220 / 48"	860 / 34"	980 / 39"	1100 / 43"	1395 / 55"	2070 / 81"	270 / 10" 5/8	695 / 27"	920 / 36"	980/2200	1300/2866	800/1760
3383/50.0	5	3675 / 145"	1460 / 57"	1105 / 42"	1225 / 48"	1345 / 53"	1395 / 55"	2070 / 81"	270 / 10" 5/8	865 / 34"	1150 / 45"	700/1550	950/2094	870/1920
3383/60.0	6	4410 / 174"	1705 / 67"	1350 / 58"	1470 / 58"	1590 / 63"	1395 / 55"	2070 / 81"	270 / 10" 5/8	1040 / 41"	1380 / 54"	550/1200	750/1653	940/2070
TRANSFORMER WITH POP-OUT SYSTEM														
3383/40.1	4	2940 / 116"	1220 / 48"	860 / 34"	980 / 39"	1100 / 43"	1395 / 55"	2070 / 81"	440 / 17" 1/3	695 / 27"	920 / 36"	980/2200	1300/2866	1100/2425
3383/50.1	5	3675 / 145"	1460 / 57"	1105 / 42"	1225 / 48"	1345 / 53"	1395 / 55"	2070 / 81"	440 / 17" 1/3	865 / 34"	1150 / 45"	700/1550	950/2094	1150/2535
3383/60.1	6	4410 / 174"	1705 / 67"	1350 / 58"	1470 / 58"	1590 / 63"	1395 / 55"	2070 / 81"	440 / 17" 1/3	1040 / 41"	1380 / 54"	550/1200	750/1653	1230/2700



FOR POP-OUT DIMENSIONS SEE PAGE MODEL 3370/3762

MULTIFUNCTIONAL PLATFORM.

The loading capacity includes the total platform weight (at shipyard's care), the full loaded tender or the jet ski.

The declared lifting capacity is assured if the load is positioned in the middle of measure C.

NEVER USE THE TRANSFORMER AS A SPRINGBOARD. DIVING MAY CAUSE STRONG STRAINS THAT MIGHT DAMAGE THE TRANSFORMER AND ITS FASTENING ELEMENTS.

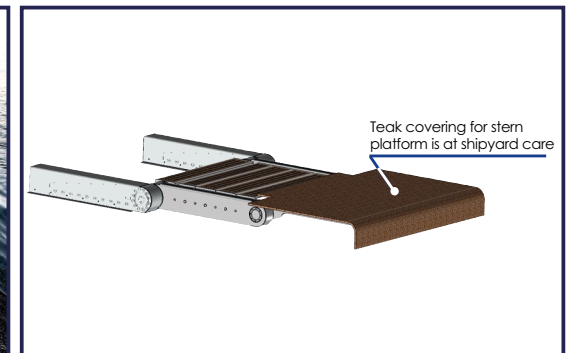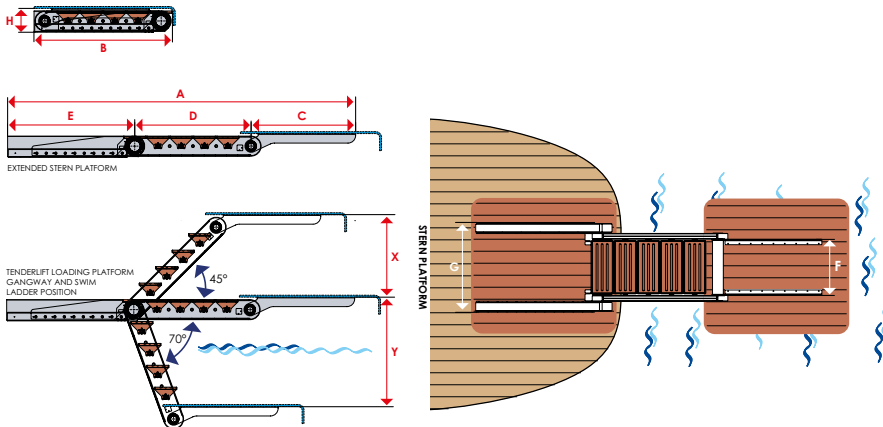

* All pictures in the catalogue are for example purpose only.